## **MODEL EB1832**

105




DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd Rolling Meadows, IL 60008

Phone: 847-259-1620

-53

0 0

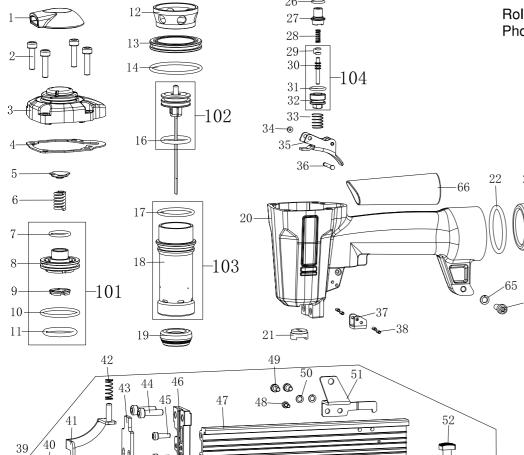

62

**®**—56

60

61

## **MODEL EB1832**

	Item Number	Spotnails Part #	Description	Item Number	Spotnails Part #	Description
	1	P-70059	Exhaust Deflector	39	P-24624	Cap Screw
	2	P-24623	Cap Screw	40	P-52039	Safety Yoke Bracket
	3	P-60222	Cap	41	P-53206	Safety
•	4	P-62045	Gasket	42	P-18576	Spring
•	5	P-15275	Exhaust Seal	43	P-10348	Front Plate
	6	P-18573	Spring	44	P-24625	Cap Screw
•	7	P-64606	O-Ring	45	P-24676	Cap Screw
	8	P-63056	Poppet Valve	46	P-08523	Wear Plate
٠	9	P-96192	Piston Stop	47	P-12580	Magazine
•	10	P-64607	O-Ring	48	P-24677	Cap Screw
•	11	P-64608	O-Ring	49	P-24678	Cap Screw
	12	P-03127	Spacer	50	P-32305	Lock Washer
	13	P-03128	Cylinder Guide	51	P-13130	Bracket
•	14	P-64609	O-Ring	52	P-04107	Latch
٠	16	P-64610	O-Ring	53	P-18578	Latch Spring
٠	17	P-64611	O-Ring	54	P-35029	Latch Housing
	18	P-05132	Cylinder	55	P-07495	Pin
٠	19	P-15276	Bumper	56	P-24679	Cap Screw
	20	P-01309	Body	57	P-03129	Spacer
٠	21	P-15277	Return Seal	58	P-12579	Magazine Cover
٠	22	P-64612	O-Ring	59	P-09246	Pusher
	23	P-60223	End Cap	60	P-13131	Pusher Stopper
٠	26	P-64615	O-Ring	61	P-13132	Spring Steam
	27	P-22225	Trigger Valve Head	62	P-18577	Spring
	28	P-18574	Spring	63	P-17044	Spring Guide
٠	29	P-64613	O-Ring	64	P-24680	Cap Screw
	30	P-22226	Plunger	65	P-32306	Lock Washer
•	31	P-64614	O-Ring	66	P-43064	Grip Cover
	32	P-22227	Valve Housing			
	33	P-18575	Spring	101	AS-63022	Poppet Valve Assembly
	34	P-32304	Rubber Washer	102	AS-06113	Piston Driver Blade Assembl
	35	AS-21032	Trigger Assembly	103	AS-05003	Cylinder Assembly
	36	P-07494	Pin	104	AS-22040	Plunger Assembly
	37	P-53205	Safety Guide	105	AS-12208	Magazine Assembly
	38	P-07495	Pin	106	AS-97408	O-Ring and Seal Kit

W00108B00301 A1

◆ Parts Included In AS-97408 O-Ring And Seal Kit