
MODEL HL1612AT



Warranty on Spotnails tools only applies when genuine Spotnails fasteners and replacement parts are used.

1100 Hicks Rd. Rolling Meadows, II 60008 Phone: 847-259-1620

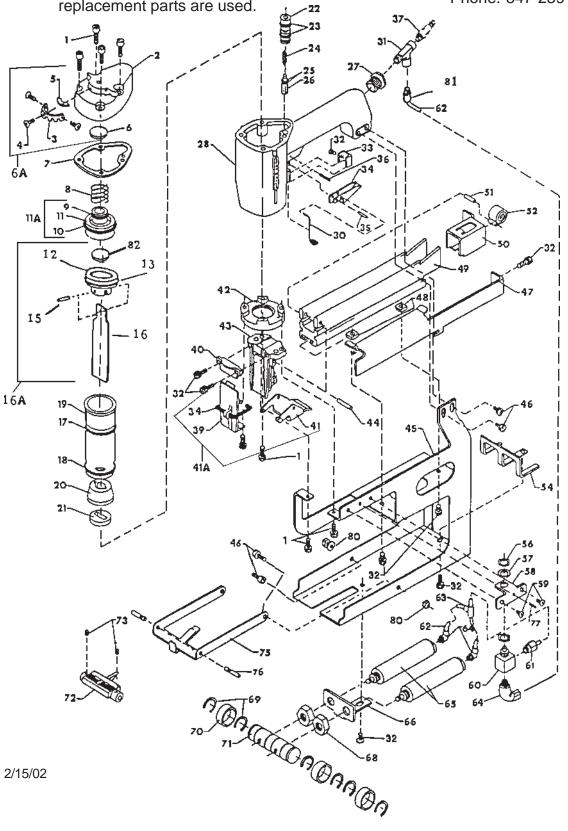

SPOTNAILS MODEL HL1612AT

Ref. No.	Part No.	Description
1	P-24072	Screw
2	P-60117	Сар
3	P-70010	Exhaust Deflector
4	P-24048	Screw
5	P-70014	Exhaust Deflector Mesh
6	P-15016	Exhaust Seal
6A	AS-60032	Complete Cap Assembly
7	P-62019	Cap Gasket
8	P-18047	Poppet Spring
9	P-64033	Poppet Stem O-Ring
10	P-64028	Poppet O-Ring
11	AS-63020	Poppet Assembly
11A	AS-63016	Poppet
12	P-66076	Piston
13	P-64228	Piston O-Ring
15	P-07016	Driver Blade Pin
16	P-06169-S	Driver Blade
16A	AS-66097-S	Piston/Driver Blade Assembly
17	P-64069	Cylinder O-Ring Top
18	P-64035	Cylinder O-Ring Lower
19	P-05048	Cylinder
20	P-15129	Bumper
21	P-15070	Return Seal
22	P-22040	Bleeder Valve Body
23	P-64032	Bleeder Valve Body O-Ring
24	P-18050	Plunger Spring
25	P-64040	Bleeder Valve Plunger O-Ring
26	P-22066	Bleeder Valve Plunger
27	P-30085	Reducer Bushing
28	AS-01138	Body Assembly
30	P-21035	Trigger Link
31	P-30008	1/4" Brass T.
32	P-24037	Screw
33	P-52027	Trigger Link Retarded Clip
34	P-21034	Trigger - Primary
35	P-07078	Trigger Pin
36	P-07023	Bleeder Valve Pin
37	P-30062	Male Connector
38	P-18136	Retainer Spring

39	Ref. No.	Part No.	Description
40 P-10204 Stationary Front Plate 41 AS-04006 Latch Assembly 41A AS-04020 Quick Clear Latch Assembly 42 P-60098 Bottom Plate 43 AS-08024 Wear Plate 44 P-07139 Center Bar 45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
41 AS-04006 Latch Assembly 41A AS-04020 Quick Clear Latch Assembly 42 P-60098 Bottom Plate 43 AS-08024 Wear Plate 44 P-07139 Center Bar 45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
41A AS-04020 Quick Clear Latch Assembly 42 P-60098 Bottom Plate 43 AS-08024 Wear Plate 44 P-07139 Center Bar 45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
42 P-60098 Bottom Plate 43 AS-08024 Wear Plate 44 P-07139 Center Bar 45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
43 AS-08024 Wear Plate 44 P-07139 Center Bar 45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
44 P-07139 Center Bar 45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
45 P-99216 Bracket 46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
46 P-24103 Bracket to Body Screw 47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
47 P-12184 Track Cover 48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
48 P-26089 Square Nuts 49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
49 AS-27029 Center Bar 50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
50 P-09114 Pusher 51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer		•	· · · · · · · · · · · · · · · · · · ·
51 P-18137 Negator Spring Pin 52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
52 P-18138 Negator Spring 54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
54 P-48021 Rear Cylinder Clamp 56 P-97403 Nut 57 P-97404 Washer			
56 P-97403 Nut 57 P-97404 Washer			
57 P-97404 Washer			
		P-97403	
58 P-48020 Valve Mounting Bracket	57		
			Valve Mounting Bracket
59 P-24031 Valve Bracket Screw	59	P-24031	
60 P-43049 Clippard Valve (MJVO-3)	60	P-43049	Clippard Valve (MJVO-3)
61 P-30059 5/32 x 1/8 Straight		P-30059	
62 P-97355 5/32 Diameter Tubing	62	P-97355	
63 P-30074 1/8" Union T (5/32)	63	P-30074	1/8" Union T (5/32)
64 P-30064 Elbow (5/32 x 1/8)	64	P-30064	Elbow (5/32 x 1/8)
65 P-43048 Cylinder	65	P-43048	Cylinder
66 P-48022 Front Cylinder Clamp	66	P-48022	Front Cylinder Clamp
67 P-30024 Street Elbow	67	P-30024	Street Elbow
68 P-26163 1/2 x 20 Nut	68	P-26163	1/2 x 20 Nut
69 P-32090 Retaining Ring	69	P-32090	Retaining Ring
70 P-46002 Needle Bearing	70	P-46002	Needle Bearing
71 P-46001 Roller Shaft	71	P-46001	
72 P-31053 Anvil	72		Anvil
73 P-24068 Set Screw	73	P-24068	
75 AS-99058 Pivot Arm Assembly	75		
76 P-07146 Anvil Dowel Pin	76		
80 P-26043 Hex Lock Nut	80		
81 P-30062 5/32 x 1/4 Straight	81	P-30062	
82 P-64244 Cylinder Seal O-Ring		D 04044	

FASTENERS HANDLED

1610PG to 1612PG 1 1/4" to 1 1/2"